



# Stretch Fabric Media Wall

## Assembly Guide

### Setting up your Stretch Fabric Media Wall

<p><b>1</b></p> <p>Take all contents out of carry bag and select the bases and the right-angled bottom pole sections.</p>	<p><b>2</b></p> <p>Remove the screw from the bottom of the right angled bottom pole section, place that section onto the base and insert the screw to connect the 2 pieces together by using the supplied allen key (or simply twisting the bottom around to tighten the screw)</p>	<p><b>3</b></p> <p>Select all pole sections that are connected together with an elastic strap and join them together. When joining poles together push the button in and make sure it clicks into place.</p> 
<p><b>4</b></p> <p>It is important to note that all poles have a symbol near the end of the pole - you must attach a pole with a particular symbol to another pole with the exact same symbol. Join all poles together in this way and continue until the frame has been erected.</p> 	<p><b>5</b></p> <p>Attach the stretch fabric banner using 2 people. Pull the fabric banner over the top of the frame, keeping it even on both sides as you slide it down until it reaches the bottom of the frame.</p>	<p><b>6</b></p> <p>Do up the zipper along the bottom of the banner and your Stretch Fabric Media Wall is ready to use.</p>

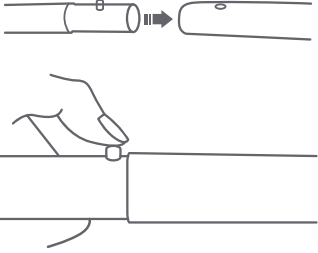