

# Pop Up Gazebo

## Care Sheet

### Cleaning

We recommend that the Pop Up Gazebo canopy and walls are cleaned after every use.

To clean the canopy and walls use a mild detergent in warm water with a soft mop or cloth. It is important to note that no solvents or abrasive cleaners should be used on any part of the Pop Up Gazebo. We suggest that you do not extend the uprights so that the canopy is more easily accessible without ladders.

To avoid the growth of mildew on the canopy and walls, it is important that the Pop Up Gazebo is completely dry before packing down into the carry case.

### Maintenance

Make sure that you check the Pop Up Gazebo before every use to ensure that:

- No part of the frame or trusses are broken or damaged
- All screws are intact and tight
- Upright posts are clean and free of any tape or other items

Any damage to the frame or trusses, or missing screws, will put extra stress on the Pop Up Gazebo and may cause structural damage or failure. The Pop Up Gazebo should not be used until these items have been repaired or replaced.

Damaged parts of the frame or trusses can be removed using a screwdriver. If replacement parts are required please contact the Easy Signs Customer Happiness Team at [sales@easysigns.com.au](mailto:sales@easysigns.com.au) and advise the exact part that you require.

### Transportation

The Pop Up Gazebos must be transported in an upright position when the canopy is attached. If it must be transported horizontally the canopy must be removed first to make sure it is not damaged during transportation.

### General Use

The Pop Up Gazebos should not be used in windy conditions. They should always be correctly secured to the ground with steel pegs, sandbags or other weights to ensure they do not move.

The Pop Up Gazebos are designed as a temporary shelter. They should not be left up for extended periods of time and should never be left unattended.

