

Green Screen Chroma Key Backdrops

Care Sheet

Cleaning

We recommend that the Green Screen Chroma Key Backdrop is cleaned regularly. To clean the backdrop use a mild detergent in warm water with a soft mop or cloth. It is important to note that no solvents or abrasive cleaners should be used on any part of the Green Screen Chroma Key Backdrop. To avoid the growth of mildew it is important that the backdrop is completely dry before being packed away.

Maintenance

Make sure that you assemble the Green Screen Chroma Key Backdrop correctly in accordance with our assembly guide and that:

- All screws are intact and tight
- All poles have been inserted into the correct pole (with the same symbol)
- All poles have been clicked into the next pole correctly
- The Green Screen Chroma Key Backdrop has been zipped up at the bottom

General Use

The Green Screen Chroma Key Backdrop should not be used outdoors unless you have safely secured it to avoid it being blown over. They should not be used in windy conditions.

